

## Printer Compatibility List for TL-PS110P

Update : 2008.09.24

No	Printer's Brand	Printer's Type
1	Brother	HL1260
2	Brother	MFC4800
3	Brother	MFC4800J
4	Brother	MFC6800
5	Brother	MFC7220
6	Brother	MFC7420
7	Brother	MFC8840D
8	CANON	S520
9	CANON	I6100
10	CANON	I6500
11	CANON	BJ-330
12	CANON	BJC4200
13	CANON	BJC4300
14	CANON	BJC4550
15	CANON	BJC4650
16	CANON	PIXMA ip4000
17	Citizen	GSX230
18	DATAMAX	I-4208
19	DATAMAX	I-4308
20	DOCUJET	1610F
21	DOCUJET	UA1610
22	Epson Japan	MC-2000
23	Epson Japan	MJ-6000C
24	Epson Japan	PM-4000PX
25	Epson Japan	PM-3700C
26	Epson Japan	PM-3500C
27	Epson Japan	PM-2200C
28	Epson Japan	PM-600C
29	Epson Japan	PM-670C
30	Epson Japan	PM-890C
31	Epson Japan	PM-920C
32	Epson Japan	PM-930C
33	Epson Japan	PM-950C
34	Epson Japan	PM-970C
35	Epson Japan	PM-980C

36	Epson Japan	LP-9600S
37	Epson Japan	LP-9500C
38	Epson Japan	LP-8800C
39	Epson Japan	LP-8700
40	Epson Japan	LP-7700
41	EPSON	Aculaser C1900
42	EPSON	C750
43	EPSON	LQ-100
44	EPSON	LQ-300
45	EPSON	LQ-300+
46	EPSON	LQ-300+II
47	EPSON	LQ-570C
48	EPSON	LQ-1000C
49	EPSON	LQ-1170+
50	EPSON	LQ-1170C+
51	EPSON	LQ-1170C
52	EPSON	LQ-2070C
53	EPSON	LQ-2080C
54	EPSON	LQ-2090
55	EPSON	LQ-2090C
56	EPSON	LQ-2170C
57	EPSON	LQ-2180C
58	EPSON	LQ-2550
59	EPSON	LQ-3500C
60	EPSON	LQ-670
61	EPSON	LQ-680
62	EPSON	LQ-680C
63	EPSON	STYLUS C60
64	EPSON	Stylus C63
65	EPSON	Stylus C67
66	EPSON	Stylus C83
67	EPSON	Stylus Color 400
68	EPSON	Stylus Color 600
69	EPSON	Stylus Color 670
70	EPSON	Stylus Color 800
71	EPSON	Stylus Color 810
72	EPSON	Stylus Color 850
73	EPSON	Stylus Pro 7600
74	EPSON	Stylus Photo 1270

75	<b>EPSON</b>	<b>Stylus Photo 810</b>
76	<b>EPSON</b>	<b>Stylus Photo 900</b>
77	<b>EPSON</b>	<b>Stylus Photo EX2</b>
78	<b>EPSON</b>	<b>Stylus Photo EX3</b>
79	<b>EPSON</b>	<b>Stylus Photo R1800</b>
80	<b>EPSON</b>	<b>EPL5700</b>
81	<b>EPSON</b>	<b>EPL5800</b>
82	<b>EPSON</b>	<b>EPL5900</b>
83	<b>EPSON</b>	<b>EPL6100</b>
84	<b>EPSON</b>	<b>EPL6200</b>
85	<b>EPSON</b>	<b>EPL-N2120</b>
86	<b>EPSON</b>	<b>TM T88III</b>
87	<b>FUJITSU</b>	<b>DL-700</b>
88	<b>FUJITSU</b>	<b>DL-900</b>
89	<b>FUJITSU</b>	<b>DL-3400</b>
90	<b>FUJITSU</b>	<b>DL-3800</b>
91	<b>FUJITSU</b>	<b>DL-3850</b>
92	<b>FUJITSU</b>	<b>DL-5800</b>
93	<b>FUJITSU</b>	<b>DL-6400Pro</b>
94	<b>FUJITSU</b>	<b>DL-6800</b>
95	<b>FUJITSU</b>	<b>FP 410</b>
96	<b>FUJITSU</b>	<b>Jet Wind 500C</b>
97	<b>FUJITSU</b>	<b>PP 10</b>
98	<b>FUTEK</b>	<b>F8000</b>
99	<b>FUTEK</b>	<b>F84+</b>
100	<b>FUTEK</b>	<b>F86+</b>
101	<b>HP</b>	<b>Color Laserjet 2605</b>
102	<b>HP</b>	<b>Color Laserjet 3700</b>
103	<b>HP</b>	<b>DeskJet 400</b>
104	<b>HP</b>	<b>DeskJet 450C</b>
105	<b>HP</b>	<b>DeskJet 500</b>
106	<b>HP</b>	<b>DeskJet 670C</b>
107	<b>HP</b>	<b>DeskJet 680C</b>
108	<b>HP</b>	<b>DeskJet 720C</b>
109	<b>HP</b>	<b>DeskJet 810C</b>
110	<b>HP</b>	<b>DeskJet 830C</b>
111	<b>HP</b>	<b>DeskJet 920C</b>
112	<b>HP</b>	<b>DeskJet 930C</b>
113	<b>HP</b>	<b>DeskJet 948C</b>

114	HP	DeskJet 970CXI
115	HP	DeskJet 1120C
116	HP	DeskJet 1125C
117	HP	DeskJet 1180C
118	HP	DeskJet 1280
119	HP	DeskJet 3820
120	HP	DeskJet 5500
121	HP	DeskJet 5550
122	HP	DeskJet 5652
123	HP	DeskJet 9300
124	HP	DeskJet 9600
125	HP	DeskJet 9650
126	HP	DeskJet 9800
127	HP	Designjet 100
128	HP	Designjet 600
129	HP	Designjet 650C
130	HP	Designjet 700
131	HP	Designjet 750C+
132	HP	LaserJet 1100
133	HP	LaserJet 1160
134	HP	LaserJet 1200
135	HP	LaserJet 1220
136	HP	LaserJet 1300
137	HP	LaserJet 1320
138	HP	LaserJet 2100
139	HP	LaserJet 2200
140	HP	LaserJet 2200D
141	HP	LaserJet 2300
142	HP	LaserJet 2410
143	HP	LaserJet 2420
144	HP	LaserJet 2500
145	HP	LaserJet 2550
146	HP	LaserJet 3015
147	HP	LaserJet 3200
148	HP	LaserJet 3330
149	HP	LaserJet 4000
150	HP	LaserJet 4050
151	HP	LaserJet 4100
152	HP	LasetJet 4250

153	HP	LasetJet 4300
154	HP	LaserJet 4500
155	HP	LasetJet 4650
156	HP	LasetJet 5000
157	HP	LasetJet 5000LE
158	HP	LasetJet 5100LE
159	HP	LaserJet 6P
160	HP	LaserJet 8100
161	HP	OfficeJet K850
162	IBM	Infoprint 20
163	IBM	Infoprint 1116
164	IBM	Infoprint 1312
165	IBM	Infoprint 1316
166	IBM	Infoprint 1332
167	IBM	Infoprint 1412
168	Konica Minolta	DI 152
169	Konica Minolta	DI 250
170	Konica Minolta	Magicolor 2450
171	Konica Minolta	Magicolor 5450
172	Kyocera	FS-1010
173	Kyocera	FS-1020
174	Kyocera	FS-1920
175	Kyocera	FS-820
176	Kyocera	FS-920
177	Kyocera	FS-6020
178	LEXMARK	E322
179	LEXMARK	Optra S1250
180	LEXMARK	T420
181	LEXMARK	T620
182	LEXMARK	C720
183	LEXMARK	W812
184	LEXMARK	Z43
185	LEXMARK	Z55
186	LEXMARK	Z705
187	LEXMARK	Z515
188	MITAC	MP-6600C
189	NEC	Pinwriter P2200
190	NEC	Pinwriter P3200
191	NEC	Pinwriter P5300

192	<b>NEC</b>	<b>PINWRITER P800C</b>
193	<b>OKI</b>	<b>Microline 391</b>
194	<b>OKI</b>	<b>B4350</b>
195	<b>RICOH</b>	<b>NF3570</b>
196	<b>PANASONIC</b>	<b>KX-P1121</b>
197	<b>PANASONIC</b>	<b>KX-P1123</b>
198	<b>PANASONIC</b>	<b>KX-P1124</b>
199	<b>PANASONIC</b>	<b>KX-P1624</b>
200	<b>PANASONIC</b>	<b>KX-P6500</b>
201	<b>SAMSUNG</b>	<b>ML-1710</b>
202	<b>SAMSUNG</b>	<b>ML-1750</b>
203	<b>SAMSUNG</b>	<b>ML-2250</b>
204	<b>SAMSUNG</b>	<b>ML-2550</b>
205	<b>SAMSUNG</b>	<b>CLP 500</b>
206	<b>SAMSUNG</b>	<b>CLP 510</b>
207	<b>SAMSUNG</b>	<b>SRP 270</b>
208	<b>SAMSUNG</b>	<b>SCX-4016</b>
209	<b>SAMSUNG</b>	<b>SCX-4100</b>
210	<b>Sharp</b>	<b>AR-255</b>
211	<b>Sharp</b>	<b>AR-265FG</b>
212	<b>Sharp</b>	<b>AR-M 160</b>
213	<b>Sharp</b>	<b>AR-M 205</b>
214	<b>Sharp</b>	<b>AR-M 207</b>
215	<b>Sharp</b>	<b>AR-M 235</b>
216	<b>Sharp</b>	<b>AR-M 275</b>
217	<b>Sharp</b>	<b>AR-M 350</b>
218	<b>Sharp</b>	<b>AR-M 400</b>
219	<b>Sharp</b>	<b>AR-M 450</b>
220	<b>STAR</b>	<b>NX-2420</b>
221	<b>TOSHIBA</b>	<b>E-161</b>
222	<b>TOSHIBA</b>	<b>Estudio-25</b>
223	<b>XEROX</b>	<b>Phaser 3310</b>
224	<b>XEROX</b>	<b>Able 3321</b>
225	<b>XEROX</b>	<b>Docuprint 240A</b>