


# Dual-Entrance German Flush Plate Installation



307E series

**1**

A.

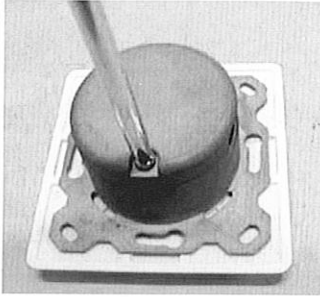


B.

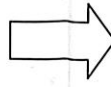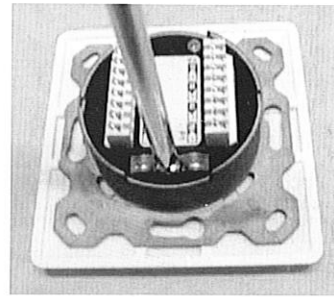

Take out the cover. Loosen the M-shape cable holder and take it up.

**2**

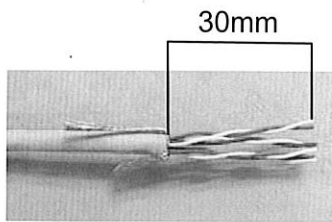

Strip 30mm cable jacket approximately, and separate the wires into 4 pairs.

**3**

**T568A**


Pin 1 White/Green  
Pin 2 Green  
Pin 3 White/Orange  
Pin 4 Blue  
Pin 5 White/Blue  
Pin 6 Orange  
Pin 7 White/Brown  
Pin 8 Brown

**T568B**

Pin 1 White/Orange  
Pin 2 Orange  
Pin 3 White/Green  
Pin 4 Blue  
Pin 5 White/Blue  
Pin 6 Green  
Pin 7 White/Brown  
Pin 8 Brown

Color-coding information for T568A & T568B wiring.



**4**

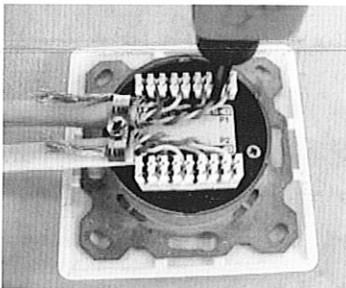

Place the cable(s) underneath the M-shape cable holder properly, make sure the foil or braid shield contact with the cable holder, and then fasten the screw.



Follow the wiring instruction to punch the wires by KRONE impact tool.

**5**

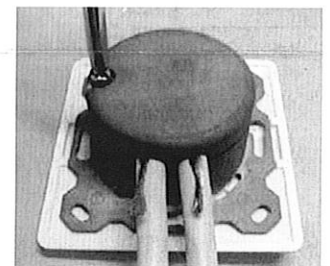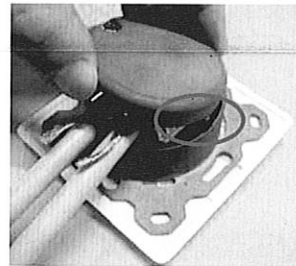

Adjust the gap on the cover to fit the cables. Latch the snag (the circle in the figure above) to the hole on the body and then fasten the screw.

**6**

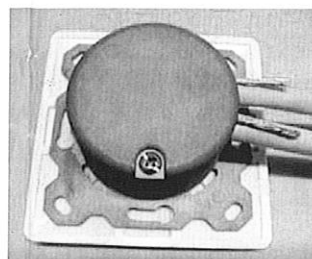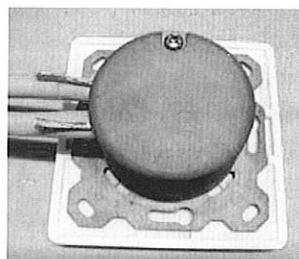

It's done.